


NARITA®

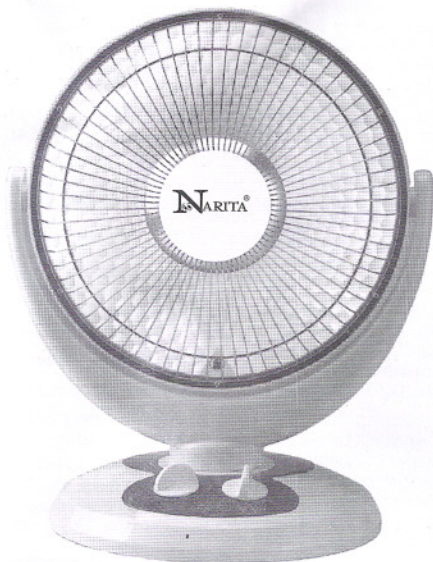

Description: Parabolic Halogen Heater

Item No.: NH-850

INSTRUCTION MANUAL

www.naritausa.com

IMPORTANT SAFEGUARDS

When using this electric unit, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

1. Read all instructions before using this unit.
2. **CAUTION:** risk of electric shock. Do not open or try to repair the heater yourself.
3. This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. If provided, use handles when moving this heater. Keep combustible materials, such as furniture, pillows, bedding, paper, clothes, and curtains at least 3 ft (0.9M) from the front of the heater and keep them away from the sides and rear.
4. Extreme caution is necessary when any heater is used by or near children or invalids, or when the heater is left operating and unattended.
5. Do not operate any heater with a damaged cord or Plug or after the heater malfunctions, has been dropped or damaged in any manner. Return heater to authorized service facility for examination, electrical or mechanical adjustment, or repair.
6. This heater is not intended for use in bathrooms, laundry areas and similar indoor locations. Never locate heater where it may fall into a bathtub or other water container. To protect against electrical hazards, DO NOT immerse in water or other liquids.
7. Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area and where it will not be tripped over.
8. To disconnect heater, turn controls to off, the remove plug from outlet.
9. Do not insert or allow foreign objects to enter any ventilation or exhaust opening so this may cause an electric shock or fire, or damage the heater.
10. A heater has hot and arcing or sparking parts inside. DO NOT use it in areas where gasoline, paint, explosive and/or flammable liquids are used or stored.
11. Avoid the use of an extension cord because the extension cord may overheat and cause a risk of fire. However, if you have to use an extension cord, the cord shall be No. 16 AWG minimum size and rated not less than 1500watts.
12. To avoid fire or shock hazard, plug the unit directly into a 120V AC electrical outlet.
13. Always unplug the unit before moving or cleaning, or whenever the heater is not in use. Be sure to pull by the plug and not the cord.
14. Use only for intended household use as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons. The use of attachments not recommended or sold by unauthorized dealers may cause hazards.
15. Do not use outdoors.
16. Always use on a dry, level surface.
17. Keep unit away from heated surfaces and open flames.
18. **WARNING:** To reduce the risk of fire or electric shock, DO NOT use this unit with any solid-state speed control device.

WARNING

POLARIZED PLUG

This appliance has a polarized plug (one blade is wider than the other.) As a safety feature, this plug fits into a polarized outlet only one way. If the plug does not fit into the outlet, reverse the plug and try again. If it still does not fit, try a different outlet. Otherwise you may need to contact a qualified electrician to install compatible outlets.

POWER CORD

A short power supply cord is provided to reduce the risk of becoming entangled or snagged. Extension cords may be used if care is exercised in their use. If an extension cord is used, the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance. The extension cord should be arranged so that it will not hang over the countertop or tabletop where it can be pulled on by children or pets, or tripped over.


19. DO NOT attempt to repair or adjust any electrical or mechanical functions on this unit. Doing so will void your warranty. The inside of the unit contains no user serviceable parts. Qualified personnel should perform all servicing only.
 20. To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surface, like a bed, where openings may become blocked.
- Do not install the unit directly under a power outlet.
 - Do not share the power outlet with other appliances.

- Do not use an adapter or extension cord.
- Unplug the unit when not in use for a prolonged period.

SAVE THESE INSTRUCTIONS HOUSEHOLD USE ONLY

PARTS

1. Built-in Carrying Handle (in back)
2. Protective Front Grille
3. Parabolic Reflection Hood
4. Base
5. Timer Knob
6. Tip-over Safety Switch (on bottom)
7. Power Knob

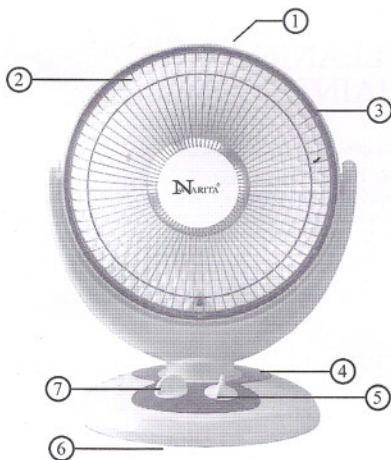

SPECIAL FEATURES

- Radiant sun-like heat
- Heats instantly
- Safety tip-over switch
- Overheat protection circuit
- Dual heat settings, 400W/800W
- Motorized oscillation
- Silent operation
- Energy efficient
- Non-flammable surface
- 2 hour timer
- Excellent for spot heating
- Doesn't burn oxygen

TO USE

1. Remove the heater from the box and place on a firm, level surface. Plug the unit into a polarized 120 V 60Hz power outlet.
2. Turn the power knob to the desired heat setting. (Timer must be set to ON.)
LOW: heating up to 400W
HIGH: heating up to 800W
OSC. LOW: heater will rotate left to right 90°, and heat up to 400W
OSC. HIGH: heater will rotate left to right 90°, and heat up to 800W

OFF: heater will stop operating

NOTE: Do not manually rotate heater. It should only be rotated using oscillation function.

3. To operate the timer, turn the timer knob clockwise to the desired position. The heater will stop automatically after the set time has expired.
4. To tilt the adjustable head, grasp the reflection hood and gently tilt it forward or backwards until you hear a click. The reflection hood can be tilted into 4 positions.

CAUTION: When tilting the adjustment head, the heater must be turned off.

IF HEATER WILL NOT WORK

1. Check if the power cord is plugged into an electrical outlet, if not, plug in.
2. Check if electricity to the main fuse is working.
3. Confirm that the power knob is turned to LOW, HIGH, OSC LOW, or OSC HIGH.
4. Confirm that the timer knob is not turned to OFF. The Timer knob must be set to ON or positioned 0-120 for the heater to operate.
5. Check if the heater is on a level surface. If the tip-over safety switch is not pushed in, the heater will not run.

CLEANING & MAINTENANCE

1. Unplug the unit and let it cool.
2. To keep the heater clean, the outer shell may be cleaned with a soft, damp cloth. You may use a mild detergent if necessary.
CAUTION: Do not let liquid enter the heater.
3. Do not immerse the heater in water.
4. Wait until the unit is completely dry before use.

STORAGE

Store the heater in a cool, dry location when not in use. Preferably, to prevent dust and dirt build-up, use the old packaging to repack the unit.

LIMITED WARRANTY

Your Narita small appliance is warranted against defective materials or workmanship for 1 year from the date of purchase, the warranty is only valid for any manufacturing defects under normal use and conditions, and we will repair or parts replacement at its option, defective parts at no charge, this warranty does not apply in the improper installation, misuse, abuse or damages cause from shipping. Any return of defective merchandise to the manufacturer must be processed accordingly by contacting customer service first to obtain the Return Authorization Number and freight prepaid with proof of purchase. We will not accept any returns of merchandise without an applicable RMA#.