

NARITA®



**Ceramic Tower Heater
Item: NH-9015TR**

INSTRUCTION MANUAL

FOR HOUSEHOLD USE ONLY

Read all the instructions carefully before you use the appliance and keep the manual for future use.

IMPORTANT INSTRUCTIONS

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to person(s), including the following:
READ AND SAVE THESE INSTRUCTIONS.

READ CAREFULLY BEFORE ATTEMPTING TO ASSEMBLE, INSTALL, OPERATE OR MAINTAIN THE PRODUCTS DESCRIBED. PROTECT YOURSELF AND OTHERS BY OBSERVING ALL SAFETY INFORMATION. FAILURE TO COMPLY WITH INSTRUCTIONS COULD RESULT IN PERSONAL INJURY AND/OR PROPERTY DAMAGE!

RETAIN INSTRUCTIONS FOR FUTURE REFERENCE.

Preparation before operating

1. Check if the electrical voltage of the main supply and the load of the socket match the rated voltage and power marked on the rating label of the appliance.
2. Check if the socket and the plug are undamaged, and put the plug well in the socket.
3. Put the appliance on a stable and flat surface to avoid risk of falling down.
4. Be sure that there is enough space for the ceramic heater while operating, at least 50 cm around the appliance, and right before the air outlet, the distance should be at least 120 cm.

Safety Precautions

- 1) Read all instructions before using this heater.
- 2) This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. If provided, use handles when moving this heater. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least a 3 feet (a 0.9 m) from the front of the heater and keep them away from the sides and rear.
- 3) Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.

- 4) Always unplug heater when not in use.
- 5) Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner. Discard heater, or return to authorized service facility for examination and/or repair.
- 6) Do not use outdoors.
- 7) Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
- 9) To disconnect heater, turn controls to off, then remove plug from outlet.
- 10) Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
- 11) To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
- 12) A heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored.
- 13) Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
- 14) Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip).
- 15) This heater is not intended for use in bathrooms, laundry areas and similar indoor locations. Never locate heater where it may fall into a bathtub or other water container.

WARNING: This product is equipped with a polarized plug (one blade is wider than the other blade). To reduce the risk of electrical shock, this plug will fit into a polarized outlet only one way. This is a safety feature. If you are unable to insert the plug into the electrical outlet, try reversing the plug. If the plug still does not fit, contact a qualified electrician. Avoid the use of an extension cord because the extension cord may overheat and cause rise of fire. Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip).

WARNING: REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK

-DO NOT USE THIS HEATER WITH ANY SOLID STATE SPEED CONTROL DEVICES.

WARNING: DO NOT DEPEND ON THE ON/OFF BUTTON AS THE SOLE MEANS OF DISCONNECTING POWER WHEN SERVICING OF MOVING THE HEATER. ALWAYS UNPLUG THE POWER CORD.

CAUTION: TO PREVENT ELECTRIC SHOCK MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT TO PREVENT THE PLUG FROM LOOSENING.

ATTENTION : POUR EVITER LES CHOCS ELECTRIQUES, INTRODUIRE LA LAMELA PLUS

LARGE DE LA FICHE DANS LA BORNE CORRESPONDANTE DE LA PRISE ET POT JSSER JUSQU'AU FOND.


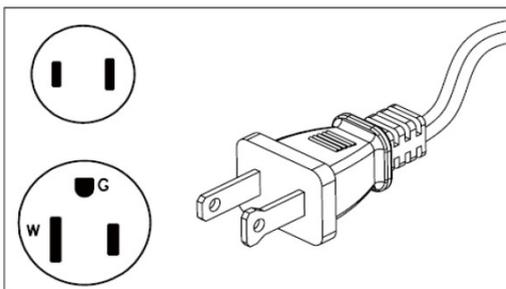


Figure A

SAVE THESE INSTRUCTIONS

Operation instruction

The HEATER can be operated by the manual controls located on the Control panel (as shown in FIGURE 2) or by your remote control (shown in FIGURE 1).

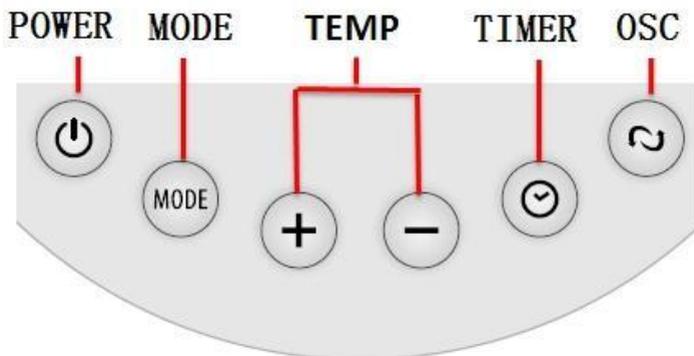

(FIGURE 2)

1. Place the Heater on a firm, level surface.
2. Insert the plug into a sized electrical socket (must be able to bear 2000W or above) . Turn on the on/off switch in the rear of the unit (FIGURE 3), when the heater is standing by, the indicator light will

be lit up.



(FIGURE 3)

3. Power: Turn the Heater ON by pressing the Power button, the LED display will show the current room temperature. The power is under High, press again and the power is off. All indicator lights are turned off except the power light. After powered off, the fan blade will still work for 30 seconds. Please press on/off switch to “O” after fan blade stops working. (See FIGURE 2 and FIGURE 3)
 4. Mode: Pressing the “Mode” button once, the Power is Low, pressing the “Mode” button twice, the heater turns into “AUTO” mode, pressing “Mode” button a third time, the heater turns into “high” mode.
 5. To turn the Heater OFF, press the Power button again and turn off power switch. (See FIGURE 1 or 2 & 3)
 6. For additional safety, there is a TIP OVER SWITCH under the bottom of the heater. When the heater falls down, the heater will stop working. When put back up, press “POWER” button to rework again. Check the heater to make sure it is not damaged before use.
- Remark: When switching the heater off, the Fan of Heater will continue to work around 30 seconds which helps to cool down the heater.

OSCILLATION FUNCTION: This function will work in any mode. Pressing the “OSC” button will allow the Heater to oscillate side by side. To stop the oscillation, press the “OSC” button once more.

TIMER FUNCTION: The timer function allows you to set the length of operation from 0.5 hour to 7.5 hours. Keep pressing Timer button to increase hours.

Once the timer has been set, the timer will count down the hours in 1 hour increments, showing on the display the remaining operating time, until the Heater will turn itself off. Pressing Timer setting button once more after the display reflects 8 hours will reset the Heater to continuously running.

TEMPERATURE INSTRUCTIONS (FIGURE 2)

- 1.To adjust SET temperature, press “MODE” button two times, the Heater turns into “AUTO”. Press the TEMP. Button to (+) to increase the desired temperature and press TEMP. (-) to decrease the desired temperature. When all things are set, the LED will be blink 5 times, then return to normal status.
- 2.When the air temperature reaches the SET temperature, the heater will cut off.
- 3.When the air temperature drops the SET temperature, the unit will operate again.

1、Handle

2、Panel

- A: Mode (High/Low/Auto)
- B: LED Display
- C: Timer (0.5-7.5 hours)
- D: Control key

3、Remote control signal receiver

4、Air outlet

5、Body

6、Base

7、Tip over switch



1. Install one 'mercury' (not included) batteries to the remote control.
2. Most of the functions performed with the Remote Control work identically to the Manual Controls (Ionic function needs to be activated by remote control).
3. When the remote control is not in use, store it into remote control storage at rear cover (See FIGURE 1A)



(FIGURE 1)



(FIGURE 1A)

SAFETY FEATURES

1. A thermal overload protector is built in to prevent overheating;
2. When an overheat temperature is reached, the Heater will be automatically shut off. It can only resume operation when the user resets the unit. (See Reset instructions below)

To Reset Heater:

5. Unplug the Heater and wait 10 minutes for the unit to cool down. Inspect it and remove any objects on or adjacent to the heater that may cause overheating.
6. After 10 minutes plug the unit in again and operate normally.
7. Plug in the appliance and switch it on. If the appliance can not operate normally, remove the plug immediately from the socket and

have the Heater serviced by an appointed service only.

Cleaning and Maintenance

MAINTENANCE

WARNING: ALWAYS UNPLUG THE UNIT BEFORE MOVING OR SERVICING. DO NOT IMMERSE THE POWER CORD, PLUG OR THE HEATER INTO WATER!

Cleaning:

Clean the heater grilles with a vacuum cleaner. This will remove lint and dirt from inside of the heater. The rear cover of the heater can be removed, and clean the mesh air filter with vacuum cleaner or under water, please remember to dry it completely before mounting it back.

DO NOT ATTEMPT TO TAKE HEATER APART. Clean the body of heater with a soft cloth.

Caution: Do not use gasoline, benzene, thinner, harsh cleaners, etc. and never use alcohol or solvents for cleaning, it will damage the heater.

Storage:

Store the heater with this instruction manual in the original gift box in a cool, dry place, and far away from children.

WARNING:	<i>To avoid danger of electric shock, unplug from outlet when not in use and before cleaning. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.</i>
-----------------	---

Children of less than 3 years should be kept away unless continuously supervised.

Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.
--

CAUTION — Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.

Any other servicing should be performed by an authorized service representative.



DISPOSAL: Do not dispose this product as unsorted municipal waste. Collection of such waste separately for special treatment is necessary.

This product must not be disposed together with the domestic waste. This product has to be disposed at an authorized place for recycling of electrical and electronic appliances.

By collecting and recycling waste, you help save natural resources, and make sure the product is disposed in an environmental friendly and healthy way.

LIMITED WARRANTY

This unit is warranted against defective materials or workmanship for one year from the date of purchase (warranty is only valid with a dated proof of purchase). The warranty is valid for any manufacturing defects only. This warranty covers operational defects incurred in normal use and does not apply in the case of damage, abuse, mishandling, accident, or failure to follow operation instructions. During the one year warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at our option). Any return of defective merchandise to the manufacturer must be processed accordingly by contacting customer service first to obtain the Return

Authorization Number and freight prepaid with proof of purchase. We will not accept any returns of merchandise without an applicable RMA#.