

NARITA

Portable Ceramic Infrared Cooktop


MODEL: NHP-602
120V~ 60Hz 1000W

To avoid any accidents or damage, it is essential to read these instructions before using. And please keep this user manual for later reference.

Product Characteristics:

1. Appliance was adopted for heating in infrared rays and no radiation. Any cookware can be used.
2. Appliance with adjustable thermostat and can be used for different cooking methods, such as boiled, steamed and roast.
3. Appliance with high hardness crystallite glass plate, it is easy to clean and without remnant.
4. Appliance with automatic temperature control function, can avoid burning food.
5. It is easy operate, just rotating the temperature control switch can produce the desired cooking effect.

Product Schematic Diagram:

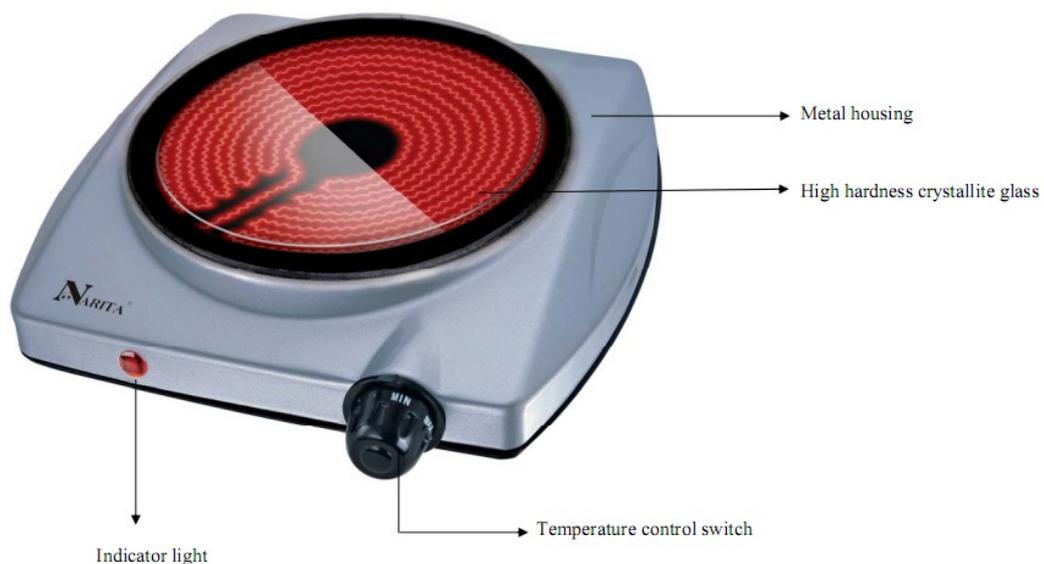

Safety Operation Instruction---Important!!!

1. Please read this operating instruction carefully before use and please keep this operating instruction for later references.
2. Please check your voltage and make sure the voltage corresponds to that stated on the appliance before use.
3. Never leave the appliance unsupervised when in use. This appliance can not used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given careful supervision or instruction use of the appliance by a person responsible for their safety.
4. Children should be supervised to ensure that they do not play with the appliance.
5. Please do not touch the power plug and power cord with wet hands.
6. Please check the power cord regularly to avoid any damage. Please do not use the appliance if the power cord or the appliance shows any signs of damage.
7. Please do not immerse the appliance into water or any other liquid for any reason whatsoever. Never place it into the dishwasher.
8. Please do not use the appliance on hot surfaces
9. If the supply cord is damaged, it must be replaced by the manufacture, it's service agent or similarly qualified persons in order to avoid a hazard.
10. Before cleaning, always unplug the appliance from the power supply.
11. Please do not use the appliance by means of an external timer or separate remote-control system.
12. Never use the appliance outside and always place it in a dry environment.
13. When in use, the temperature on the glass is quite high, please do not remove the appliance. When in use or shortly after use, the glass is hot, the power cord and other non heat-resistant items are strictly prohibited from touching hot surfaces.
14. Please put the appliance on a flat surface when using.
15. Please do not clean the appliance unless it is cooled down and please make sure the power cord does not touch the glass when hot.
16. When using the appliance or the appliance is still hot, please protect the appliance from touching with inflammable materials, such as oil, curtains, cloth, etc.
17. Always unplug the appliance when it is not in use, especially since it is not equipped with an on/off switch.
18. Please do not heat without pot or with empty pot!
19. The temperature of accessible surfaces may be high when the appliance is operating.
20. If the surface is cracked, switch off the appliance to avoid the possibility of electric shock.
21. This appliances is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and others working environment;
 - farm house;
 - by clients in hotels, motels and other residential type environment;
 - bed and breakfast type environment.

Direction for Use:

1. Make sure the control knob is in the "0" position when plugged in.
2. Any high temperature resistant cookware with flat bottom can be used on the appliance.
3. Put the food into the pot and put on the pot on the center of heating plate.

Note: The better the pot, the better the cooking result. The base should be flat as possible.



4. Heating select switch:
 - 1.2.3 used for Boiling and Steaming function
 - 4.5 MAX used for Baking, Frying function
5. After use, turn the heating switch to "0" position and unplug the appliance from electrical outlet.
6. After using, the appliance still hot, keep warm the foods.
7. Please unplug after the appliance cooled down.

Maintenance:

1. Please unplug before cleaning the appliance.
2. Wipe the ceramic glass surface with a damp cloth and a little neutral cooktop cleaner, then wipe dry with a clean cloth. Remnants of cleaner must not be left on the surface. Please do not use coarse scourers or abrasive pan cleaners.
3. Please do not wash with water directly and please do not immerse into the water for cleaning.
4. Please make sure the bottom of the pot should be clean to avoid a dirty ceramic hob.

Tip:

- 1) Please follow these instructions. The warranty will not cover any damage that may occur if these instruction are not followed..
- 2) Please clean the hob when the appliance cooled down.

Warning:

- 1) The cooking zone will become hot when you cook. Always keep away from the appliance.
- 2) Do not be use the appliance to heat the room.
- 3) Be care when plugging in electric appliance near the hob. Connection leads must not come into contact with the hot surface.
- 4) Dot not use any caustic, abrasive cleaners! The surface may be damaged.

This unit is warranted against defective materials or workmanship for one year from the date of purchase (warranty is only valid with a dated proof of purchase). The warranty is valid for any manufacturing defects only. This warranty covers operational defects incurred in normal use and does not apply in the case of damage, abuse, mishandling, accident, or failure to follow operation instructions. During the one year warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at our option). Any return of defective merchandise to the manufacturer must be processed accordingly by contacting customer service first to obtain the return Authorization Number and freight prepaid with proof of purchase, We will not accept any returns of merchandise without an applicable RMA#.