



Electric Hot Pot Instruction Manual



Important:

Please read this manual carefully before operating this product. Keep this manual handy for further reference.

Specification:

Item : NPC-1205
Voltage : 120V ~ 60Hz
Power : 600W
Capacity : 1.2L

SAFETY PRECAUTION

Please read the following instructions carefully before using the product.

1. The product should be used with its own power cord. Please note that it cannot be used with other product's power cord.
2. When operating appliance, do not leave appliance unattended.
3. To avoid being scalded, please keep the product out of children's reach.
4. When using, place the product on a flat surface. Do not operate or place the product near other sources of heat and/or other electric appliances.
5. When operating the product, do not touch the steam rising from the glass cover to avoid being scalded.
6. Water should not be added above the maximum water line in order to prevent being scalded by spilling boiling water. Water should also not be filled below the lowest water line to prevent the hot plate from dry heating, thus damaging the product. The unit must be covered up with glass cover when boiling water.
7. Do not hang the power cord over the table or surfaces near other high temperature objects.
8. The voltage of the power source should be the same as indicated on the unit's rating label.
9. Do not operate appliance in the presence of inflammable materials such as gas, curtains, etc.
10. Switch off appliance when connecting or disconnecting from power supply.
11. Do not use this appliance if the cord or plug is damaged, or if this unit is malfunctioning or damaged in any way.
12. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
13. Unplug the appliance from power outlet and allow to cool before cleaning.
14. Do not use the appliance other than for its intended use.
15. This appliance is intended for home use only.
16. Do not use outdoors.

CLEANING AND MAINTENANCE

- Before cleaning, always disconnect appliance from power supply.
- Do not immerse cooker base in water or other fluids when cleaning.
- Use a soft cloth and mild detergent to clean.
- Do not use coarse or abrasive cleaner or steel wool to clean the appliance.
- The presence of either "minerals" or "hard water" in the water piping system may cause brown or white spots and minerals scale that may appear on the surface of the stainless steel inner pot or the walls of the inner pot; could visually resemble rust spots. As these spots are not rust, it is harmless and safe to consume water or food from the appliance.
- These spots can be removed by boiling white vinegar and water (ration 1:2) or citric acid crystal solution (food grade) to remove them. For tough stains, you may need to use a good metal cleaner to remove the stubborn stains and then wash off with soap solution before using.
- When the product is not in use, please clean it well and put it in the packing box, store it at a dry place.

HOW TO USE

- When using the unit for the first time, water should be added to the maximum water line. Pour out the water after it boils to clean the pot.
- Remove the glass lid and fill with water, which should not be lower than the lowest line nor higher than the highest water line. Close the unit with glass lid.
- Plug the power cord into a power source and turn the switch to " low " or " high " (" low " means slow cook, " high " means fast cook).
- Turn the switch to "off" if you need the unit to stop heating. At this time, Make sure to unplug the unit if you do not need heating any more.

LIMITED WARRANTY

This unit is warranted against defective materials or workmanship for one year from the date of purchase (warranty is only valid with a dated proof of purchase). The warranty is valid for any manufacturing defects only. This warranty covers operational defects incurred in normal use and does not apply in the case of damage, abuse, mishandling, accident, or failure to follow operation instructions. During the one year warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at our option). Any return of defective merchandise to the manufacturer must be processed accordingly by contacting customer service first to obtain the Return Authorization Number and **freight prepaid with proof of purchase**. (Please pack your product well; we will not be responsible for damages incurred as a result of improper packing.) We will not accept any returns of merchandise without an applicable RMA#.