

NARITA®

TRAVEL KETTLE



Item:NTK-005

Please read this manual carefully before use

Identifying the parts



- 1. Kettle body
- 2. Lid
- 3. Handle
- 4. Indicator
- 5. ON/OFF Switch

- 6. Power Cord
- 7. Voltage Selector Switch

Water Scale & Removal:

1. There may be a case that the water inside the kettle appears cloudy or greasy when boiling. This is caused by calcium carbonate: a harmless naturally occurring mineral within the water and may become apparent when water is boiled.
2. To minimize the scale build up, empty the kettle and rinse it thoroughly after each use and never leave the water in the kettle overnight.
3. It is suggested to remove the scale by boiling water with a mixture of white vinegar and leave it overnight and then rinse the kettle thoroughly.

LIMITED WARRANTY:

This unit is warranted against defective materials or workmanship for one year from date of purchase (warranty is only valid with a dated proof of purchase). The warranty is valid for any manufacturing defects only. This warranty covers operational defects incurred in normal use and does not apply in the case of damage, abuse, mishandling, accident, or failure to follow operation instructions. During the one year warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at our option). Any return of defective merchandise to the manufacturer must be processed accordingly by contacting customer service first to obtain the Return Authorization Number and freight prepaid with the proof of purchase. We will not accept any returns of merchandise without an applicable RMA#.

General Safety:

1. It is imperative that you select the correct voltage before using. Failure to do so will damage kettle.
2. When in use, position the kettle on a firm, level surface, close to the power socket and out of reach of children.
3. Do not use in the bathroom or near any source of water or where any liquids are present.
4. Do not place the kettle or the power cord on or near any hot surface (including hot plates or burners).
5. Do not let the power cord hang over the edge of the work surface or touch hot surfaces.
6. Do not allow children to use the kettle.
7. Even though the kettle has the function with boil dry protection, never use it without water. If the function of boil dry protection has turned off the kettle, please let it cool down completely before re-use.
8. The kettle must not be covered during use.
9. Do not pour anything while the kettle is switched on.
10. When cleaning the inside of the kettle, do not use a screwdriver or fork or any items of similarity as these may cause damage to the heating plate.
11. The kettle should not be moved or touched when in use. Do not leave the kettle unattended when it is in the process of boiling water.
12. Always unplug the kettle from the power socket after use and let it cool completely before cleaning and storing it.
13. Remove the water scale from the kettle frequently; as large buildup of scale may affect performance and reduce the life span of the heating plate.
14. When cleaning, never let the cord come in contact with water or any other liquids.
15. The kettle is only made for boiling water. Heating milk or other liquids may damage the kettle.
16. This appliance is not intended for use by people (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
17. Children should be supervised to ensure that they do not play with the appliance.

Name	Model No.	Rated Voltage	Rated Frequency	Rated Power	Capacity
Travel Kettle	NTK-005	120V/240V	60/50Hz	1000W	500ml(0.5L)

WARNING:

Please take caution when removing the lid after boiling water; it may cause hot steam to rise. The lid may also be hot after boiling water. Be careful when removing the lid with hot water inside. It is recommended to pour the contents of the Travel Kettle out before removing the lid.

DO NOT TOUCH OR MOVE the Travel Kettle when it is in use because of the extremely hot surface of the body. DO NOT leave the kettle unattended when it is in the process of boiling water.

Do not operate the kettle with a damaged power cord or plug. If it is damaged, return it to our service department for repair. This kettle is for household use only. Do not use outdoors.

*The attached plug is for use in United States, dual voltage for worldwide use (some countries may need a plug adapter).

Before First Use:

1. Wash the inside of the Kettle Body ① with liquid detergent and warm water, rinse and dry.
2. Wipe the outside of the Kettle Body ① with a cloth, using liquid detergent and warm water.
3. Wash the Lid ② in liquid detergent and warm water.
 - DO NOT IMMERSE ANY PART OF THE KETTLE IN WATER, EXCEPT FOR THE LID ②.
4. Turn the Kettle upside down and use a flathead screwdriver or paperclip to set the Voltage Selector Switch ⑦ to correspond to the supply voltage in your location, 120V or 240V.
 - IF YOU TRAVEL TO ANOTHER LOCATION, CHECK THE SUPPLY VOLTAGE AND, IF NECESSARY, ADJUST ACCORDINGLY. FAILURE TO DO SO MAY RESULT IN DAMAGE TO THE KETTLE.
5. Follow the "How to Use" instructions to boil the maximum amount of water, then discard the water.

How to Use:

1. Position the Kettle on a dry, level and stable surface, away from direct heat.
2. The power Cord ⑥ should be positioned so as not to cause an obstruction or to overhang the edge of the surface. The Kettle should not be positioned directly below a wall socket.

3. Remove the Lid ②.

4. Pour the required amount of cold water into the Kettle, ensuring that the level is below the MAX 0.5L mark.

- DO NOT OVERFILL, OR USE WITH LESS THAN A CUP FULL OF WATER.

5. Place the Lid ② back on.

6. Insert the Power Cord ⑥ into a wall socket and switch on with the (ON/OFF) Switch ⑤.

7. If the Indicator ④ does not illuminate, press (ON) Switch ⑤.

- Once the Indicator ④ illuminates, the Kettle will begin to heat the water. When the water has begun to boil, the Kettle will switch off automatically and the Indicator ④ will extinguish.

8. If you want to stop the program before the water has boiled, press the (OFF) Switch ⑤.

9. Switch off the power and remove the Power Cord ⑥.

10. Pour water from the spout of the Kettle, as required.

- TAKE CAUTION WITH VERY HOT WATER.
- Once the water has cooled, it can be reheated by pressing the (ON) Switch ⑤. This will not function while the water is still hot.
- THE KETTLE HAS OVERHEATING PROTECTION, WHICH WILL AUTOMATICALLY SWITCH IT OFF. HOWEVER, YOU SHOULD TAKE CAUTION NOT TO ALLOW IT TO BOIL DRY.

Cleaning & Care:

- Allow the Kettle to cool completely before cleaning.

1. Wash the inside of the Kettle Body ① with liquid detergent and warm water, rinse and dry.

2. Wipe the outside of the Kettle Body ① with a cloth, using liquid detergent and warm water.

3. Wash the Lid ② in liquid detergent and warm water.

- DO NOT IMMERSE ANY PART OF THE KETTLE IN WATER, EXCEPT THE LID ②.
- Do not use harsh abrasive cleaners or brushes with metal bristles.
- When the kettle is not in use, store in a dry place.