

NARITA®



NARITA®

ELECTRIC HOT POT

Instruction Book



WM-6105

**SAVE THESE INSTRUCTIONS
HOUSEHOLD USE ONLY**

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs
3. To protect against fire, electric shock and injury to persons do not immerse cord, plugs in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliances.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or injury to persons.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.

LIMITED WARRANTY

This unit is warranted against defective materials or workmanship for one year from the date of purchase (warranty is only valid with a dated proof of purchase). The warranty is valid for any manufacturing defects only. This warranty covers operational defects incurred in normal use and does not apply in the case of damage, abuse, mishandling, accident, or failure to follow operation instructions. During the one year warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at our option). Any return of defective merchandise to the manufacturer must be processed accordingly by contacting customer service first to obtain the Return Authorization Number and freight prepaid with proof of purchase. We will not accept any returns of merchandise without an applicable RMA#.

Using Your Hot Pot

BOILING WATER

1. Fill the Hot Pot with the amount of cold water needed or to the maximum water level gauge located on the inside of the unit as "MAX". Do not fill the unit with more than 4 cups/1L of water. Keep the Hot Pot level when filling.
2. The Hot Pot should always be unplugged when filling with water or adding more water.
3. Place the Hot Pot on a dry, flat surface. If using on delicate surfaces, use a protective pad to protect against heat damage.
4. Plug the cord into wall outlet.
5. Turn the temperature control knob from "LOW" to "HIGH".
6. Water will soon come to a complete boil.
7. DO NOT ALLOW TO BOIL DRY. To prevent the Hot Pot from boiling dry, do not fill it with less than 1 cup/250ml of water. The minimum water level gauge is located on the inside of the unit as "MIN".
8. To avoid the spilling of hot liquid, keep the lid in place while boiling or pouring.
9. Be sure the appliance is unplugged immediately after use.

11. Always plug cord into the wall outlet first, then operate the appliance. To disconnect, turn control to "O", then remove the plug from wall outlet.
12. Do not use appliance for other than intended use.

SAVE THESE INSTRUCTIONS HOUSEHOLD USE ONLY

CONSUMER SAFETY INFORMATION

This product is equipped with a polarized plug (one blade is wider than the other blade) to reduce the risk of electric shock. This is a safety feature. The plug will fit in to a polarized outlet only one way. If you are unable to insert the plug into the electrical outlet, try reversing the plug. If the plug still does not fit, contact a qualified electrician. Do not attempt to defeat the safety feature by modifying the plug in any way.

Power Cord

A short power supply cord is provided to reduce the risk of becoming entangled in or tripping over a longer cord. Extension cords are available and may be used if care is exercised in their use:

1. Arrange the longer cord so that it will not drape over a countertop or tabletop where it can be tripped over, snagged, or pulled on unintentionally (especially by children).

- The marked electrical rating must be at least as great as that of the product.

Before Your First Use

Carefully unpack your Hot Pot and remove all packaging materials. To remove any dust that may have accumulated during packaging, wash the jug with warm water. Wipe the exterior of the unit with a clean, damp cloth.




IMPORTANT: Use only cold water for heating. Do not use harsh detergents or abrasive cleansers.

WARNING

NEVER LEAVE APPLIANCE UNATTENDED WHILE IN USE. ALWAYS UNPLUG THIS APPLIANCE FROM OUTLET WHEN NOT IN USE.

Pour boiling water slowly as hot steam may escape causing serious burns. Do not use for heating oil or butter. Do not overfill. Do not operate when empty. This appliance is intended to hold hot or boiling liquids. Do not use this appliance to cook raw meats, fish or poultry or to reheat solid foods. To avoid burns or other injuries, extreme caution must be used when moving an appliance containing hot or boiling liquids. Keep away from children when operating.

Getting To Know Your Hot Pot

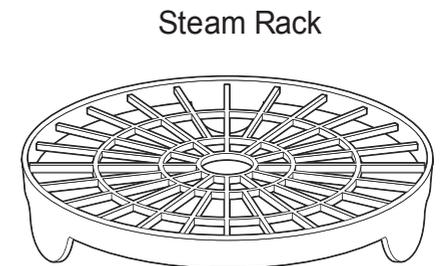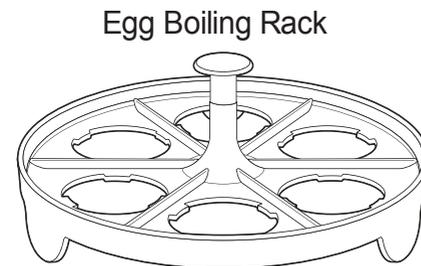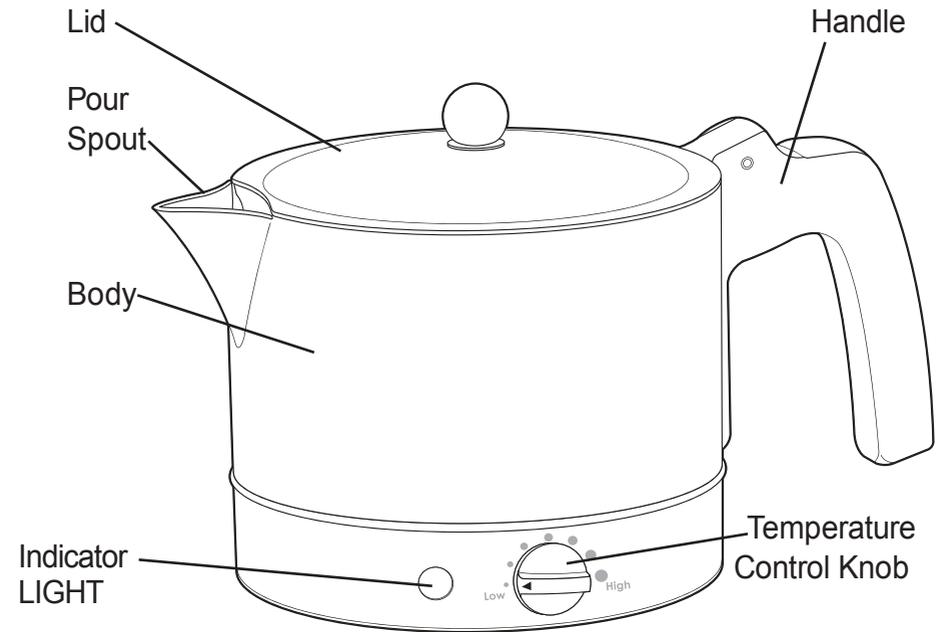

RATING: 120V, 60 Hz, 1000W, AC ONLY