



Instruction Manual

MINI RICE COOKER



NRC-101A

Please read this manual thoroughly before operating this unit
This unit must only be serviced by the authorized center

IMPORTANT SAFEGUARDS

1. This appliance is intended for household use only. **DO NOT** use the appliance outdoor or for any other purpose than it's intended use.
2. Always unplug the power cord from the outlet before disconnecting the power cord from the unit.
3. Ensure the unit is switched off and unplugged after each use and before cleaning.
4. **DO NOT** immerse the appliance or power cord in water or any other liquid.
5. **DO NOT** place the appliance or any parts of the appliance (including the power cord) near an open flame or heated cooking appliance.
6. This is **NOT** a toy. Close supervision is necessary when appliance is operating near children.
7. If Power cord is damaged, it must be replaced and repaired by our service center.
8. **DO NOT** attempt to dismantle, repair, or modify the appliance. Only our service technicians may do this.
9. When in use, **DO NOT** cover the cooker and keep combustible materials at least 1.5m from the cooker.
10. **DO NOT** leave the unit unattended while it is operating.
11. **DO NOT** use sharp or abrasive materials to clean or wipe the interior pot, as this will damage the non-stick coating.
12. The pot and its outersurface must be dry before use.
13. **DO NOT** overfill (exceed the maximum waterline) the cooking pot when cooking.
14. Handle cooking pot with care. **DO NOT** put or heat it on stoves.

NOTE:

To avoid danger of electric shock, unplug from outlet when not in use and before cleaning. If the supply cord is damaged, **STOP** using and bring it to service centre for repairing immediately.


PARTS IDENTIFICATION



1. Outer Lid	8. Cook & Warm Indicators
2. Steam Vent	9. Heating Plate
3. Seal Ring / Inner Lid	10. Power Socket
4. Non-Stick Cooking Pot	11. Detachable Cord Set
5. Buckle	12. Steamer / Food Tray
6. Outer Housing	13. Spatula
7. Switch Panel	14. Measuring Cup

OPERATING INSTRUCTION

1. Clean the cooking pot with mild detergent and rinse thoroughly with tap water.
2. Use the other container (not the cooking pot itself) to rinse the rice. Otherwise the non-stick coating may be damaged.
3. Put the clean rice into the cooking pot with the correct amount of water according to rice package directions or waterline inside the cooking pot.
4. Make sure the content inside the pot does not exceed the maximum waterline at 0.3L (fg. 1)
5. Dry and lower cooking pot slowly while adjusting the pot so that it fits the outer housing well. Close and lock the lid with the buckles on both sides (fg. 2).
6. Connect the power cord connector to the appliance.
7. Connect the other end of power cord to the power outlet. The red color indicating words “COOK” will illuminate. Press the switch down to start cooking. When the rice is cooked, the switch will spring up and the red “COOK” words and the orange “WARM” words will illuminate and continue to be illuminated. Please keep the cooked rice inside the cooking pot for 10 minutes after the rice is cooked to ensure excess moisture has been completely absorbed.
8. Enjoy your rice!!

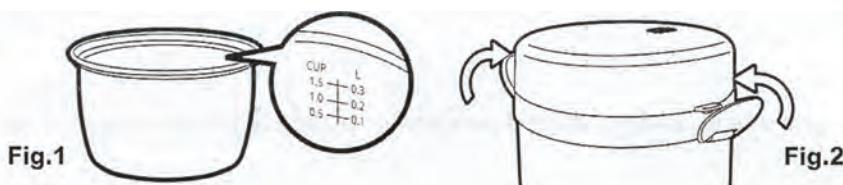

WARNING :

- a. Always disconnect the power cord from the power outlet before unplugging the unit.
- b. During cooking, beware of hot steam exhausted from the vent.

LIMITED WARRANTY



This unit is warranted for defective materials or workmanship for one year from the date of purchase.

The warranty is valid for any manufacturing defects only. This warranty covers operational defects incurred in normal use and does not apply in the case of damage, abuse, mishandling, accident, or failure to follow operation instructions.

Narita shall have no responsibility for any damages incidental to equipment and its sole responsibility shall be for the repair or replacement as indicated, except for shipping and handling costs.

There are no implied or expressed warranties of fitness or merchantability which extend beyond the above warranty.

Note: Any unit for reimbursement or repairing should be sent back with original complete box to the authorized service representative.





NARITA®
naritausa.com